

# Technical Bulletin

Volume 5, Issue 3

## SEPARATOR LUBRICATION INSTRUCTION

Technical Bulletin Reference No. 0503-001

Effective August 22<sup>nd</sup>, 2016

### NOTE:

Prior to installation and use on a bar gun, be sure to add a "silicone based" lubricant to the internal seal. Without proper lubrication DAMAGE may occur taking the separator on and off during use.

### WARNING

DO NOT USE PETROLEUM BASED LUBRICANTS  
OR THE SEAL MAY BECOME DAMAGED.

